

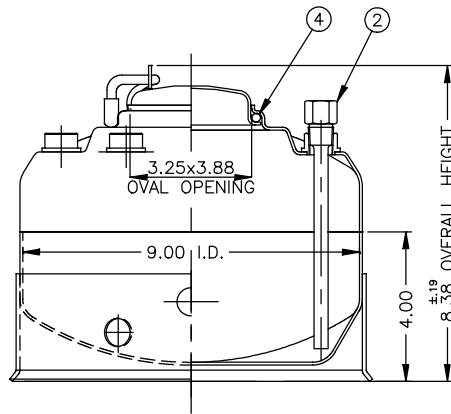


REVISION
A 7-15-85
C/O 8500
B 1-16-88
C/O 8845
C 3-28-90
C/O 9882
D 10-30-90
C/O 10105
E 1-28-92
C/O 10700
F 05-28-93
C/O 10105
G 11-02-95
C/O 12087
H 04-23-96
C/O 12161
I 07-29-96
C/O 12322
J 5-4-98
C/O 13006
K 5-4-98
C/O 12677
L 5-4-98
C/O 12743
M 6-06-2000
C/O 13280
N 6-06-2000
C/O 13332
O 6-06-2000
C/O 13710
P 6-06-2000
C/O 13461
Q 7-10-2001
C/O 14101
R 8-28-2006
C/O 15555
S 10-24-2006
C/O 15614
T 3-25-2008
C/O 15884
U 8-21-2008
C/O 15938
V 10-10-2008
C/O 15992
W 2-8-2010
C/O 16194
X 1-10-2013
C/O 16694
Y 6-04-2013
C/O 16771
Z 1-24-2018
C/O 17692

TOP VIEW

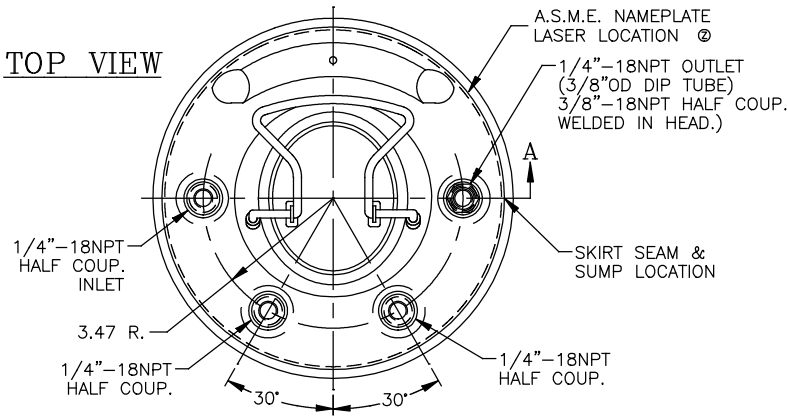

SECTION "A"

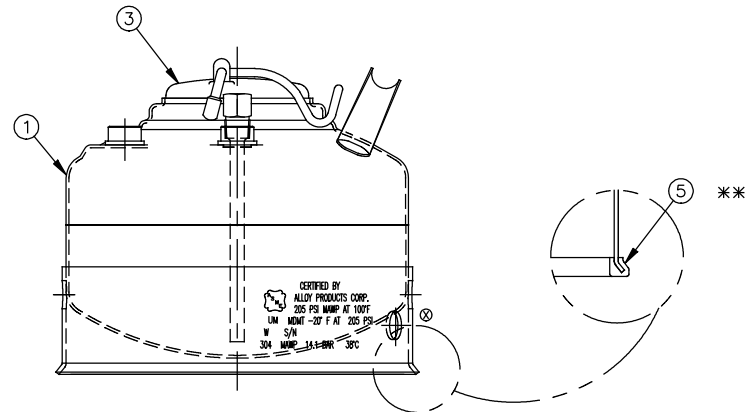

ITEM	DWG./PART NO.	MATERIAL	QTY.
1	C208-0305-00	SOC 9" TANK WELDMENT	304 1
2	A206-4414-00	DIP TUBE ASSEMBLY	304 1
3	C506-0491-00	CLOSURE LID ASSEMBLY	304 1
4	A100-0100-00	CLOSURE SEAL O-RING	E.P.D.M. VITON T.E.V. 1
	A100-0161-00		
	A100-0361-00		
5	A109-0003-00	RUBBER BOOT	EPDM 1

* SEE CURRENT SHOP ORDER FOR O-RING TYPE TO BE USED.

** ITEM 5 IS OPTIONAL. INSTALL ONTO SKIRT WHEN P/N B501-0865-00-X-R IS ORDERED. (X BEING O-RING CHOICE E, F, OR V).

MATERIAL NOTES:

MATERIAL TO BE TYPE 304/316 STAINLESS STEEL.
SHEET/PLATE STOCK PER A.S.M.E. SPEC. SA-240.
BAR STOCK PER A.S.M.E. SPEC. SA-479.
WROUGHT/FORGED STOCK PER A.S.M.E. SPEC. SA-182.
WELDED OR SEAMLESS PIPE PER A.S.M.E. SPEC. SA-312.
TUBING PER A.S.M.E. SPEC. SA-249.

NOTES:

- CONSTRUCTION MEETS LATEST A.S.M.E. "UM" CODE & ADDENDA.
- ALL WELDS TO BE GTAW (OR) AND GMAW.
- MAXIMUM WORKING PRESSURE: 205 P.S.I.G. @ 100°F.
- HYDROSTATIC TEST: 308 P.S.I.G.
- TANK WILL NOT BE FULLY DRAINABLE WITH THIS OUTLET DESIGN.
- FINISH: WHITE PICKLE.
WELDS ARE AS WELDED.

BT-15	BT-1	NOTICE THIS DRAWING AND THE DATA SHOWN ARE PROPRIETARY INFORMATION AND SHALL NOT BE USED WITHOUT APPROVAL OF ALLOY PRODUCTS CORP.	DWG. UNITS ARE IN INCHES UNLESS OTHERWISE SPEC'D.	DRAWN	DATE REDRAWN	9" I.D. TANK ASSEMBLY 1 GALLON	304
			TOLERANCES .XX DECIMALS ±.030 .XXX DECIMALS ±.015 ANGLES ±1°	JSB	2-8-2010		
			ALLOY PRODUCTS CORP WAUKESHA, WISCONSIN	APPR'D RW	PLT'D SCALE 1/5		
			DWG. NO.		REV.		
			B501-0865-00		Z		